

GET. SET. PLAY.



Airdopes 121 Twin Wireless Ear-buds


Thank you for choosing boAt Airdopes 121, True Wireless Earbuds. Please think of this manual as your guiding map. Knowledge of Bluetooth and device connection is essential for operating the earbuds. Therefore, we strongly advise that this manual is thoroughly read before beginning use, and referred to when in times of difficulty.

Package Contents

- 1 x boAt Airdopes 121
- 1 x Charging Case
- 1 x Micro USB Charging Cable
- 2x Pairs of Additional Earbuds (Small & Large)
- 1 User Manual
- 1 Warranty Card
- 1 Catalogue


Overview

- 1 MFB (Multi Function Button) / Power Button
- 2 Battery Indicator

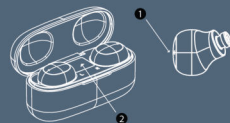

Power On:

- Step 1:** Take out the earbuds from the charging case, the earbuds will power on automatically.
 - Step 2:** If they are already outside the case then you can long press the MFB (Multi-Function Button) on both earbuds for 3 seconds to manually power them on.
 - Step 3:** Please wait a few seconds while both the earbuds automatically pair with each other and go into connection mode.
- Note:**
- Both the earbuds are master earbuds.
 - Pairing mode lasts for 5 minutes. If the pairing time is missed then you'll need to reconnect the earbuds and follow the above mentioned procedure.
 - Airdopes 121 remembers the previously connected device. Once switched on, the earbuds automatically reconnect with the previously paired device.

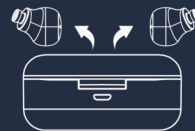

Connection Mode:

- Step 1:** Turn on Bluetooth on your device and then scan (Transmission range: 10m).
- Step 2:** Scan for Airdopes 121 and pair accordingly. Enter '0000' as the pass key if asked for.
- Step 3:** Congratulations! Your Airdopes 121 is connected successfully. One earbud's LED starts to alternate blue & red and the other earbud's LED starts to alternate blue & red every 5 seconds, once the connection is established.



LED Indicators / Functionalities

- 2 Seconds:** Long press the MFB on either earbud for 2 seconds to activate voice assistant.
- 3 Seconds:** Long press the MFB on both earbuds for 3 seconds to manually Power On.
- 5 Seconds:** Long press the MFB on either earbud for 5 seconds to manually Power Off.
- Triple-Tap:** Factory Reset. When powered off and inside the case, triple tap the MFB on both earbuds.

Single Earbud Usage

- Step 1:** At this stage your earbuds are in stereo mode and connected to Bluetooth device.
 - Step 2:** Simply remove left/right earbud from your ear.
 - Step 3:** Place the earbud back inside the charging case.
 - Step 4:** Congratulations! You are now using mono / solo mode.
- Note:**
- Both the earbuds are master earbuds; single earbud usage will work on both the earbuds.
 - To switch to stereo mode, simply take out the earbud that has been kept inside the case. It will automatically power on and pair along with the other earbud, hence restoring the stereo usage.

Charge the Earbuds:

- Put the earbuds into the charging case in their correct orientation.
 - A red LED on the earbuds will indicate they are being charged.
 - This LED will turn into blue and then turn off once the earbuds get fully charged.
 - When both the earbuds are fully charged, the carrying case will switch off to save power.
- Charge the Case:**
- To charge the case, plug in the provided micro USB cable into the charging case and connect it to any USB port for e.g. a wall adapter or computer.
 - The display inside the charging case indicates the charge/battery status percentage.
- Warning: Please do not charge the carry case with "9V" or "12V" output. Otherwise, it may cause damage to the case. Charge only according to the charging norm (not more than 0.2A).**

Basic Functions:

- **Voice Assistant** - Long press the MFB on either earbud for up to 2 seconds to activate voice assistant.
- **Answer/hang up phone call** - Single press the MFB on either earbud to answer any incoming call and once again to hang up once done talking.
- **Playing phone calls** - Press and hold the MFB on either earbud for 1.5 seconds to reject an incoming call.
- **Play/Pause** - Single press the MFB on either earbud to play/pause music at your convenience.
- **Previous track** - When playing music, double press the left earbud's MFB to go back to the previous track.
- **Next track** - When playing music, double press the right earbud's MFB to skip to the next track.

Note: The volume control is controlled via the earbuds. You may control the volume via the phone or media device.



Voice Assistant:

- Step 1:** Long press the Multi-Function Button on either earbud for 2 seconds to activate the voice assistant.
 - Step 2:** The respective voice assistant screen pops up and you may place your commands as ease.
- Tip:** You may try the following commands,
- What is the weather?
 - Set a reminder



Smart Power Off

- After usage, please remove the earbuds from your ears and place them back inside the case in correct orientation and close the lid of the case. This will power off the earbuds and put them into charge.

Manual Power Off

- Step 1:** When in standby state, long press the MFB on either earbud for 5 seconds to manually power off the earbuds. Please note that this will power off both the earbuds.
- Step 2:** Place them back inside the case to charge the earbuds and close the case lid.

Factory Reset:

- Perform the below steps in case you face any difficulty while operating your Airdopes 121.
- Step 1:** Place both the earbuds inside the charging case in their correct orientation.
 - Step 2:** Triple tap the MFB on both earbuds to perform the factory reset. Once done, 8 LEDs indicated by alternate red and blue LED flashes.
 - Step 3:** Shut the lid of the case and then reopen it again.
 - Step 4:** Once you take the earbuds out from the case they automatically restart.
- Congratulations! Your Airdopes 121 has been reset.



Common Problems with Solutions:

- **If only one earbud is functioning:**
 - If only one earbud is functioning: Simply insert the earbuds back into the case and take them out or perform the Factory Reset.
- **If earbuds are not in scan mode:**
 - If earbuds not in Scan mode simply put back both the earbuds in case and take out again or perform "Factory Reset".

Specifications

Product Name	TWS Earbuds
Device Type	2 Ears
Connectivity	Bluetooth 5.0 (BT)
Water Resistance	IPX4
Frequency	160-2000 Hz
Frequency Response Range	20Hz-20KHz
Case	PC+ABS
Bluetooth	V4.0
Bluetooth Range	10m
Bluetooth Version	2.0/3.0/4.0
Earbud Battery	20mAh
Charging Case Battery	300mAh
Charging Voltage	5V
Charging Time	about 2 Hours
Operating Time	3-5 Hours (with Case)
Frequency	160-2000 Hz (with Carry Case)
Power	1W (Charge)
Product Weight	~10g

Charging norms & Precautionary Guidelines:

- 1) Charger/Block/Adapter: 5V 2A
 - 2) Cable/Wire: Standard Cable (35 strands (0.10mm diameter) / strands)
- Any other accessory can be paired up with this product as long as the specifications are as per above norms.

Troubleshooting

Potential Problem	Solution
Right earbud disconnected from phone call	Be sure to insert it in the charging case and check by using them again. It will connect automatically.
Left and right earbuds are not pairing	Go factory reset the device.
Reset 20 seconds delay or not disconnect the MFB earbud	Power off, then switch on once more
Occasional disconnect and reconnection issues	Power off, then switch on once more
If there are other accessories in use	Place the earbuds in the charging case and look for any other apps. If there does not work, try resetting the device.

Cautions:

- Please do not let the earbuds come into contact with sharp edges, uneven surfaces, and metal parts, in a manner that can lead to some form of permanent external or internal damage.
- Please don't dismantle the product in any way, it can lead to a fire or electrical breakdown and even completely damage the product. As this is extremely unsafe, we ask that any maintenance or servicing of the earbuds is done only through a qualified service provider/manufacturer.
- Please do not remove the battery by yourself. This is a task meant to be managed by a service provider/manufacturer. Replacing the current battery with a different jet can result in a fire or electric hazard, therefore it is strongly advised against.
- Please clean the earbuds with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earbuds are kept away from extremely hot or cold substances.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are listening to music. After wearing the earbuds, gradually turn up the volume until you reach a comfortable listening level. Exposure to any noise levels at or above 85 dB on a gradual level by a long of hearing.
- Any damage to the earbuds that is NOT a manufacturing issue will make the product's warranty null and void. Please take the greatest care of your earbuds to ensure that no such occurrence takes place.
- Do not use earbuds when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.