




# Rugby PLUS

Thank you for purchasing the boAt Rugby Plus. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubt that may arise. You can stay plugged into the sound with Bluetooth wireless technology, AUX, and TF mode. This portable speaker has been designed for smooth interface that requires minimal of efforts. It's time to delve deeper into Nirvana.

## Package Contents

- 1x Portable Wireless Speaker
- 1x Type-C Cable
- 1x Aux-in Cable
- 1x User Manual
- 1x Catalogue
- 1x Warranty Card

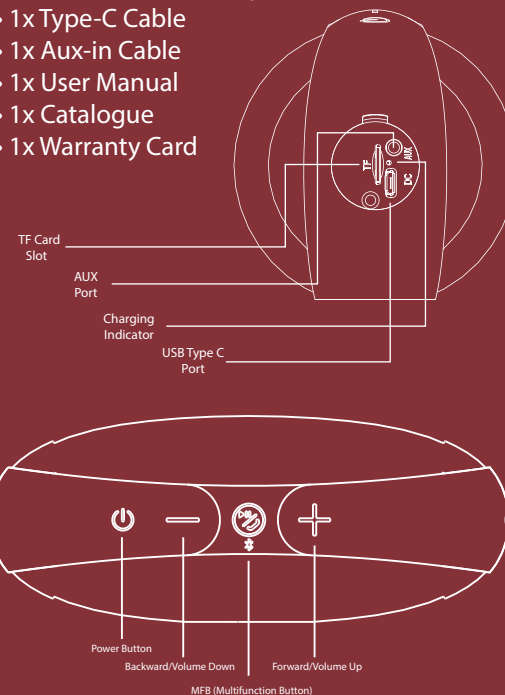

## Basic Functions

Objective	Instructions
Power On	Long press the Power button for 3 seconds
Power Off	Long press the Power button for 3 seconds
Pairing	Auto Pairing Mode
Successful pairing	Select Rugby Plus
Disconnect	Long press the MFB to disconnect the Bluetooth connection
Receive a call	Short press the MFB to receive incoming calls
Reject the call	Long press the MFB for rejecting incoming calls
Hang up the call	Short press the MFB to hang up an ongoing call
Volume Up	Short press the Volume Up '+' button in steps
Volume down	Short press the Volume Down '-' button in steps
Next track	Long press the Volume Up '+' button
Previous Track	Long Press the Volume Down '-' button
Play/Pause	Short press the MFB

## Bluetooth Connectivity:

1. Turn the speaker on and its LED indicator flashes rapidly in blue
  2. Activate the phone's Bluetooth function and search for "Rugby Plus". As soon as the speaker has been selected by you and paired, there will be a sound prompt indicating pairing and the blue LED starts flashing slowly.
- Note:
- The speaker can automatically reconnect to the last paired device.
  - The speaker gets automatically turned off if there's no pairing for 5 minutes.



### AUX IN

When the unit is turned on, insert the provided AUX cable into the AUX port for playback via AUX mode.

### TF Card Mode:

- You can switch to TF card mode as well.
- Insert the TF Card in the TF Card slot for playback.

### Charging:

- Connect one end of the provided charging cable to the charging input and the other end to an adaptor of DC 5V/2A.
- While charging the LED stays solid red and on the other hand when the full charge is done the LED turns off.

### Note:

- Please don't use the speaker while it is in charging as it may decrease the battery's performance


### Troubleshooting

- A.**
- **Question:** The device cannot find "Rugby Plus" on Bluetooth?
  - **Reason:** The speaker may not be in pairing mode.
  - **Solution:** Restart the speaker to search again.

- B.**
- **Question:** The speaker is taking very long to charge?
  - **Reason:** The adapter's power output is too low, and the charging cable's consumption is too high.
  - **Solution:** Please choose the adapter with an output that is not less than DC 5V/2A and use the original charging cable.

## Specifications

Bluetooth Version:	V5.0
Speaker Type	Stereo
Working Range:	10m
Driver Size:	57mm*2
Supported Profiles:	A2DP, AVRCP, HFP
Water Resistance Level:	IPX7
Frequency:	60Hz-18kHz
Input Voltage:	DC 5V/2A
Output Power:	16W
Charging Time:	Around 2-3 hours
Charging Interface	USB Type C
Playing Time:	Up to 7 hours
Battery:	3.7V / 2000mAh

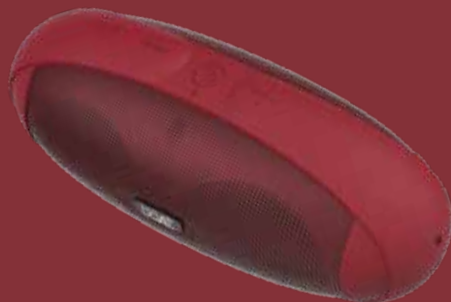

## Safety Precautions

- Please note that the battery life of the speaker varies with the volume music is being played at. If at a lower volume, the battery life will be longer than when the speakers are playing at full volume
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Furthermore, make sure it is turned off and disconnected from all Bluetooth devices. Do not use alcohol, benzene and other chemicals to clean the speaker. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker or handle the battery in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. The battery must not be mishandled or replaced as when it can result in explosions or fire hazards. Therefore, please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- If the speaker gets wet, please ensure that it is dried quickly and completely after coming into contact with water. Please do not allow the speaker to be submerged into water at any cost.

## Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adaptor	: 5V 2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

