

BLITZ
2000

boAT

**THE BEAST
UNLEASHED**



BLITZ
2000

Thank you for purchasing the boAT Blitz 2000. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubt that may arise. You can stay plugged into the sound with Bluetooth wireless technology, AUX, USB, FM or SD Card. This 2.1 Channel multimedia speaker has been designed for smooth interface that requires minimal of efforts. It's time to delve deeper into Nirvana.

 
Note: This speaker is meant for indoor usage only.

- 12. **MUTE:** To mute the sound
- 13. **BT:** Playback via Bluetooth mode
- 14. **FM:** Playback via FM mode
- 15. **STOP:** To stop the playback
- 16. **NEXT:** To skip to the next track
- 17. **REPEAT:** To repeat a song
- 18. **BASS+ :** To increase the bass volume
- 19. **RESET:** To go back to factory default settings
- 20. **TRE+ :** To increase the treble volume
- 21. **Numeric Pad:** Choose track from 0 – 9
- 22. **EQ Off:** To turn off the EQ

NOTE: “◀▶/▶▶” buttons don't work in the AUX mode, you can change tracks via the connected media device under AUX mode.

Battery Installation:

- Open the battery case and insert two AAA batteries and close the case
- Keep the remote controller within 5m range, aiming around 30° at the unit

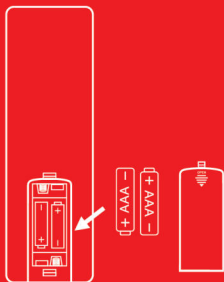

Note: It is advisable to remove the batteries when the unit is not being used for a long period of time

Setting Up Blitz 2000:

- Plug the cable of the satellite speakers into the output jack on the rear panel of the subwoofer
- The audio cable has to be plugged into the input jack on the rear panel of the subwoofer for the AUX mode
- Plug the power cord into the power socket and switch on the unit, the front panel LED lights up in red and the unit automatically enters into Bluetooth mode
- You can use the volume buttons on the remote controller or the subwoofer to control the volume levels
- You can control the bass / treble via the remote controller
- You can press the Mode button on subwoofer to cycle through BT, AUX, USB, SD Card and FM modes

Note:

- You can manually tune specific FM station with the help of numeric keys on the remote controller. For e.g. : if you want to select 98.3 MHz station, under the FM mode, press 9, 8 and 3 on remote controller and the unit will tune into 98.3 MHz channel
- Please connect FM antenna for better FM reception. The quality of FM radio depends on the FM reception in your area

 
Bluetooth Connectivity:

- To switch to Bluetooth mode, turn on the Bluetooth functionality on your phone or media device and put the speakers under BT mode
- Search for 'Blitz 2000' from the list of available devices nearby and select the same

Package Contents:

- 1x Subwoofer
- 2x Satellite Speakers
- 1x Aux-in Cable
- 1x Antenna Cable
- 1x Remote Controller
- 1x User Manual
- 1x Warranty Card

Subwoofer Control Panel:



- 1. **Mode Button:** Single tap to switch playback mode among BT/USB/TF/FM/AUX modes
- 2. **Volume - :** Tap to decrease volume
- 3. **Volume + :** Tap to increase volume
- 4. **USB Input:** USB port
- 5. **SD Input:** SD Card port
- 6. **Previous Button:** Single tap to go to previous song on the playlist or previous FM channel
- 7. **Play/Pause Button:**
 - Single tap to Play or Pause the playback
 - In FM mode, long-press to auto-search channels, short-press to stop auto-search
 - In Bluetooth mode, long press to disconnect
- 8. **Next Button:** Single tap to go to next song on the playlist or next FM channel

Important Notes:



This symbol alerts you about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



 
Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

- Never handle the power cord or its plug with wet hands when plugging or unplugging
- Ensure that the main power switch is in 'OFF' state before connecting the power cord to the power supply in order to avoid damage to the unit
- Never use a power cord after it has been damaged as it can easily cause an electrical shock or fire hazard

Troubleshooting:


- **Question:** The device cannot find "Blitz 2000" on Bluetooth?
- **Reason:** The speaker may not be in pairing mode.
- **Solution:** Check by tapping the Mode button or Restart the speaker to search again.

Subwoofer Rear Panel:

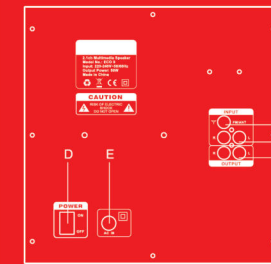

- A. **STEREO INPUT**
RCA Connectors to take input from external audio source
- B. **STEREO OUTPUT**
Front Left & Front Right
- C. **FM Antenna**
- D. **POWER ON/OFF** switch
- E. **POWER INPUT**
220-240V 50/60Hz

 Remote Controller:

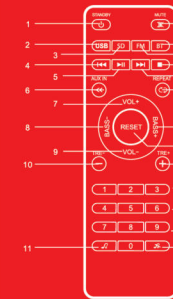

- 1. **Standby:** Press this button to turn ON / OFF the subwoofer
- 2. **USB:** Playback via the USB mode
- 3. **SD:** Playback via SD / MMC mode
- 4. **PREVIOUS:** To return to the previous track
- 5. **Play/Pause:** To play or pause the playback / In FM mode, long press to auto-search channels
- 6. **AUX IN:** Playback via AUX mode
- 7. **VOL+ :** To increase the volume
- 8. **BASS+ :** To reduce the bass volume
- 9. **VOL- :** To reduce the volume
- 10. **TRE- :** To reduce the treble volume
- 11. **EQ Mode:** Tap the button to select among POP, ROCK, JAZZ, CLASSICAL or COUNTRY EQ modes

Specifications:

Bluetooth Version:	V5.0
Speaker Type	2.1 Channel Multimedia Speaker
BT Working Range:	10m
Driver Size:	6.5"*1 SW, 3"*2 Satellites
FM Frequency	87.5-108MHz
S/N Ratio	≥60dB
Frequency:	30Hz-20kHz
Impedance	4Ω SW, 4Ω Satellites
Output Power	100W
Connectivity Modes	BT/AUX/USB/SD/FM
Product Size-Subwoofer	W252*H270*D289mm
Product Size-Satellite	W127*H150*D115mm

Safety Precautions:

- Unplug the unit during storm or lightning and when it isn't being used over a long period of time
- Keep children away from the unit as it might pose a risk of electrical shock if used unsupervised
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Furthermore, make sure it is turned off and unplugged from power socket. Do not use alcohol, benzene and other chemicals to clean the speaker, and use only dry cloth to clean. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. Please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- If the speaker gets wet, please ensure that it is dried quickly and completely after coming into contact with water. Please do not allow the speaker to be submerged into water at any cost. The speaker is meant for indoor usage only.