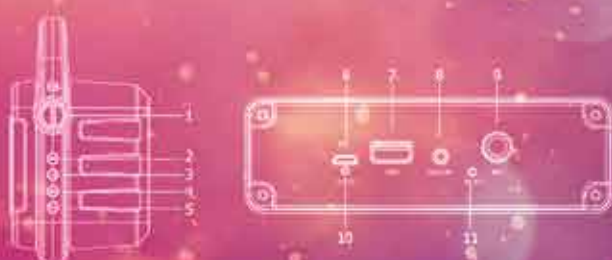


**Q) Why can't I hear my microphone response?**

A) Ensure the microphone is connected correctly and switched on. Also check that the unit is not in USB voice record mode.

**CAUTIONS :**

- Please note that the battery life of the speaker varies with the volume music is being played at. If at a lower volume, the battery life will be longer than when the speakers are playing at full volume.
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Further, make sure it is turned off and disconnected from all Bluetooth devices. Do not use alcohol, benzene and other chemicals to clean the speaker. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker or handle the battery in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. The battery must not be mishandled or replaced as when it can result in explosions or fire hazards. Therefore, please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- Please ensure that the speaker is dried quickly and completely after coming into contact with any liquids. Please try to ensure that this does speaker does not get wet in any way at all.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are plugging into Nirvana. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

**Product Diagram :**

**PARTY PAL 20**



Take the party with you wherever you go, with a portable Bluetooth speaker with the colourful LED light show of the boAt PartyPal 20. Perfect for karaoke kings and queens, simply connect the microphone to showcase your talents and record sing alongs with the voice recorder function. Play your tunes via Bluetooth from your smart device, and use the inbuilt media ports or even FM radio. This speaker is light enough to be carried by its shoulder strap and features an internal rechargeable battery with up to 5 hours power from a single charge.

Get ready to sail to the shores of Nirvana with your boAt PartyPal 20.

**FEATURES**

- Stylish and rugged design
- Connect to your smart device with Bluetooth
- Wired Microphone included for karaoke and voice record functions
- LED colour light Speaker in grille
- Media player with inbuilt FM/USB/AUX and Microphone ports
- Internal rechargeable battery with up to 5 hours of playback time
- Ideal for karaoke, house parties and more

**Package Contents**

- PartyPal 20 Speaker
- User Manual
- Microphone + Cable
- Micro USB Cable
- Warranty Card
- Catalogue



Shikhar Dhawan

**PARTY PAL 20**

**Bluetooth Mode:**

- Select Bluetooth mode by short pressing the Power/mode button until you hear the relevant Bluetooth voice prompt.
- The Speaker will automatically enter Bluetooth pairing mode and become discoverable on your smart device.
- Enter the Bluetooth device list on your smart phone and search for "boAt PartyPal 20" and select to pair.
- Your device may ask for a pairing confirmation code, enter "0000" if prompted. When successful, a pairing tone will be heard.
- Once paired, the Speaker will automatically reconnect to your device when both are in Bluetooth mode and within 10m's of each other.
- You can now also use the unit's play/pause, previous track/station or Next track/station buttons to control the music on your connected smart device.

**USB Mode:**

- The Speaker is fitted with a media player which can play compatible music files from the USB port on the back of the unit.
- Simply insert your USB media and the unit will automatically enter USB mode and a voice prompt can be heard.
- Alternatively, you can select the USB mode by short pressing the Power /mode button repeatedly until you hear the relevant voice prompt.
- You can control and scroll through the tracks using the play/pause button, previous track/ station or Next track/ station buttons on the front of the unit.
- The Speaker also has a memory function which means it will continue from the last played track, on the last occasion it was inserted.

**FM mode:**

- Select FM mode by short pressing the power/mode button until you hear the relevant voice prompt.
- To perform a channel scan, short press the play/pause button. The Speaker will now scan through the FM frequency, automatically saving any stations with a strong enough signals.
- Once the scan has finished, you can stroll back and forward through the saved channels using the previous track/station or next track/station buttons accordingly.

*Note: If you are experiencing interference or poor signal quality on certain stations, it may be necessary to move the unit nearer to a window or doorway.*

**Aux-in Mode:**

- The Speaker can be connected to any audio device with either a single headphone 3.5mm jack or twin RCA stereo output using the appropriate connection lead (not provided in package contents).
- Simply connect the device correctly to the AUX in port on the back of the unit and enter the AUX mode by short pressing the Power/ mode button until you hear the relevant voice prompt.
- Music from the connected device cannot be played through the Speaker's control board. It must be controlled from the connected device.

**USB voice record mode:**

- With a compatible USB device connected to the unit, short press the Power/mode button until you hear the relevant voice prompt.
- Connect the microphone supplied to the microphone jack on the back of the unit. Next, short press the Next track/station button to begin recording through the connected microphone.
- Short press the previous track/station button to end the current recording session.
- Short press the Play/Pause button to listen to the last recorded session.

- To listen to all your recording sessions in order, press the power/mode button and enter normal USB playback mode. You can then scroll through the session using the play/pause, previous track/ station or Next track/station buttons on the front of the unit the same as you would a normal MP3 album.

**Using the Microphone:**

- Connect the microphone supplied to the back of the unit as described above and switch it on.
- You can now sing along to your favourite music tracks whilst playing them through Bluetooth, USB, AUX in and FM modes.
- To adjust the microphones echo/reverb, long press the previous track/station or Next track/station buttons accordingly.
- Note: The microphones volume can only be controlled by the unit's master volume and has no independent volume control.

**Basic Functions**

- (1) Power on: Long press the multifunction button to power on the PartyPal 20.
- (2) Power off: Long press the multifunction button to power off the PartyPal 20.
- (3) Mode Switch: Short press the multifunction button to change the mode.
- (4) Play/Pause (▶⏸): Tap the button once to play/pause music. Long press the button to turn the LED light on/off. Press in FM mode to channel surf and short press when in record mode to begin playing saved recordings.
- (5) Next Track/ Station button: Short press to move to the next track in BT/USB mode, or previous station in FM mode. Long press with the microphone inserted to decrease the echo/reverb Speaker. Short press in record mode to end the recording session.
- (6) Previous track/station button: Short press to move to the previous track in BT/USB mode, or previous station in FM mode. Long press with the microphone inserted to decrease the echo/reverb Speaker. Short press in record mode to end the recording session.
- (7) Reset Function: Press using a pin or sharp object to reset the unit when required.

**Charging the battery:**

- Fully charge the Speakers internal battery before first use. Uses the USB cables provided and only connect to a suitable 5V USB power supply.
- During charging, the LED indicator will glow red and go out when the unit is fully charged.

*Note: If the Speaker is used while connected to a USB power source, the indicator will always glow, even when the unit is fully charged.*

**LED light show:**

- The Speaker has an inbuilt disco style LED light show housed within its front grilled design. This will automatically be enabled when the unit is switched on.
- To disable the light show at any time, long press the Play/pause button.

**FAQ:****Q) Why is there no sound?**

A) Check that the volume level isn't turned down or off or alternatively try tuning to another FM station. If you are connected to another device, ensure the volume level of the device is audible and that the device has been connected correctly.

**Q) Why won't the Speaker switch on?**

A) Ensure your device has Bluetooth mode switched on and is discoverable. Also ensure your device is within 10m range of the unit

**Q) Why can't I play the music from my USB flash drive**

A) Ensure the flash drive is inserted correctly and that the music is either in MP3 or WAV format. The maximum sizes of storage the Speaker can handle are 64GB and also ensure that the media is formatted in FAT32.