 


PRODUCT MANUAL


Thank you for purchasing the boAt Stone 1400. You are now just a step away from the Realm of Nirvana. Please follow this user manual carefully in case of any doubts and difficulties that arise. You can stay plugged into the sound with Bluetooth™ wireless technology, AUX and USB mode. This portable speaker has been designed for smooth interface that requires the most minimal of efforts. Get ready to Switch the Scene Up!

Accessories

- boAt Stone 1400 x 1
- User manual x 1
- Type-C Cable (For Charging) x 1
- 3.5mm AUX cable x 1
- Warranty Card x 1

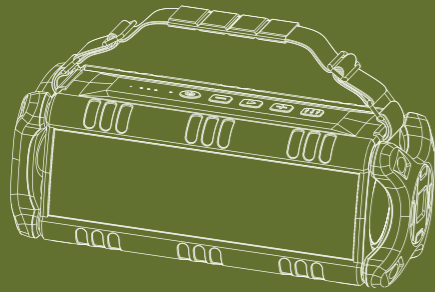

Buttons:

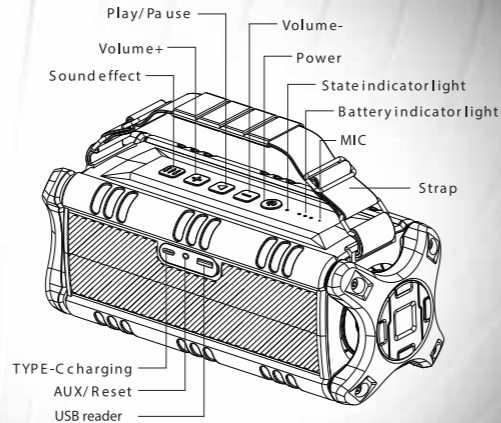

FUNCTIONS

1. **Power on:** Press and hold the "⏻" for 2-3 seconds under you hear a beep and the blue LED light comes on
2. **Power off:** Press and hold the "⏻" for 2-3 seconds under you hear a beep and the blue LED light goes off
3. **Volume down:** Tap the "⏮" button to reduce the volume level
4. **Volume up:** Tap the "⏭" button to increase the volume level
5. **Next Song:** Press and hold the "⏭" button to skip to the next song
6. **Previous Song:** Press and hold the "⏮" button to go back to the previous track
7. **Pause/Play/Mute:** Use the "⏸" button if you want to pause or play music. Use the button to mute tracks in AUX mode.
8. **To Charge**— Use the type C cable to connect the speakers to a charging point. A red light will come on to indicate that the speakers are charging.
9. **Re-dial the last number:** Press and hold the "⏮" button to redial the last number.
10. **Reject a Call:** Press and hold the "⏮" button when receiving an incoming call.
11. **Hang up the Call:** Tap the "⏮" button when you are done with a call to hang up.
12. **Mode Switch:** Tap the "⏻" to enter various modes compatible with the speaker (AUX, USB)
13. **AUX Mode:** Insert AUX to AUX Mode—
(Indoor: Green LED liquid / Outdoor: Green LED slow flash (every 1 second))
14. **USB Mode:** Connect the USB into the port and change the mode via "mode switch" to begin using.
(Indoor: Green LED liquid / Outdoor: Green LED slow flash (every 1 second))
15. **Equalizer Switch:** You can switch the modes using the "EQ" equalizer button.

• Please note that the LED indicator can be used to switch between Indoor and Outdoor audio mode with the click of a button.

TO PAIR WITH BLUETOOTH

The speaker will enter auto pairing mode, the LED light will flash blue every 2 seconds to indicate this.

1. Press and hold the power button to switch the speakers on, there will be a prompt as well as the rapid blinking of the aforementioned LED indicator light. Turn on the Bluetooth function on your Smartphone or any other compatible device.
2. Search for "boAt Stone 1400" from the available list of Bluetooth devices and connect the two. Enter the passkey '0000' if one is asked for during connection.
3. After successfully pairing, the speaker is now ready to play music from your Smartphone.
4. The speaker will not automatically connect to this device when switched on if it is in range and the Bluetooth mode is on.

Note: To Disconnect Bluetooth, press and hold the "⏮" and "⏭" buttons together until the device Indoor: Blue LED liquid / Outdoor: Green LED slow flash

HOW TO SET UP TWS


1. To get started with True Wireless Sound, turn on both the Stone 1400's.
2. Select one of the devices and double tap the Power button, this will make the speakers pair with each other. Please note that the speaker you choose will become the main device and the LED light will flash green and blue alternately while pairing. (The main device: Blue and Green LED Alternately flash).
3. After successfully pairing, the main device's LED light will flash blue, and the auxiliary device will be a solid blue.

4. On your phone, search for "boAt Stone 1400" and connect to the speaker. If the two speakers are paired with one another, TWS is now ready to be used. After successfully connecting, the two devices can play music together. TWS can only be used in Bluetooth mode and only the main speaker's hands-free function can be utilized.

Note: Disconnect TWS: Press the "⏮" and "⏭" buttons together, the Blue LED fast flash (every 2 seconds) means it has been disconnected. Further, only the main speaker can be used for taking calls while in TWS mode.

SPECIFICATIONS

- ☒ Bluetooth version: BT4.2
- ☒ Output power: 30W
- ☒ Speaker unit :Diameter 70 mm outside driver
:Diameter 30 mm inside driver
- ☒ SNR: ≥75DB
- ☒ Working time: Up To 7 Hours of Audio Bliss
- ☒ Charging voltage/current : TYPE C DC/2000MA
- ☒ Support USB Flash Drive, Music format: MP3,WAV,WMA,APE,FLAC
- ☒ Transmission: 10M (Vary from environment and devices)
- ☒ Battery voltage :7.2V
- ☒ Battery : 2500mAh
- ☒ Charging time: 4.5 hours (Full charge)
- ☒ THD: ≤10%
- ☒ Product size: 319.5*118*119.5mm

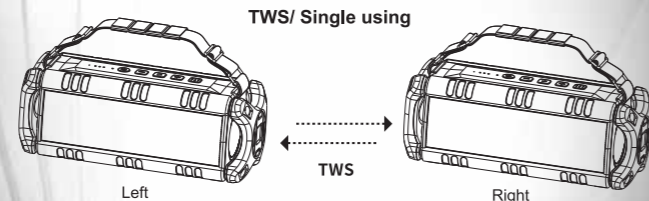

SAFETY PRECAUTIONS

- Please note that the battery life of the speaker varies with the volume music is being played at. If at a lower volume, the battery life will be longer than when the speakers are playing at full volume
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Further, make sure it is turned off and disconnected from all Bluetooth devices. Do not use alcohol, benzene and other chemicals to clean the speaker. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker or handle the battery in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. The battery must not be mishandled or replaced as when it can result in explosions or fire hazards. Therefore, please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- While the speaker is IPX 6 water resistant this does not mean that it is absolutely waterproof. Therefore, please ensure that the speaker is dried quickly and completely after coming into contact. Please do not allow the speaker to be submerged into water at all costs.

