



AIRDOPES  
100



# boAt AIRDOPES 100

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 100. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

## Charging the Case

**Step:** To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

White LED blinks continuously while the case is on charging. When the case gets fully charged, it gets indicated by solid white LED.

- Case with more than 70% charge: White LED turns on in solid for 3 seconds when the case lid gets opened.
- Case with less than 70% charge: White LED flashes for 3 times when the case lid gets opened.


## Case LED indication when Earbuds are getting charged from the case

This is to indicate that the Earbuds are getting charged from the Case (When Lid is closed):

1. When the left/right earbud is put into the charging case and the cover is closed (charging), the white LED of the charging case flashes once.
2. When both the earbuds are put into the charging case and the cover is closed at the same time, the white LED of the charging case flashes twice.

## Basic Functions

- Voice Assistant: Long touch either CTC for 3 seconds to activate your default smart voice assistant
- Answer: Single tap the CTC on either earbud to answer an incoming call
- Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject call
- Play/Pause Music: Single tap either earbud's CTC to play or pause music
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song

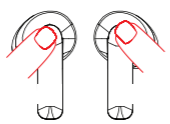


**Note:**  
• Volume can only be controlled via the media device

## Voice Assistant

**Step 1:** Long touch the CTC on either earbud for 3 seconds to activate default smart voice assistant

**Step 2:** The respective voice assistant screen pops up and you may place your commands at ease

*Tips: You may try out the following commands,*

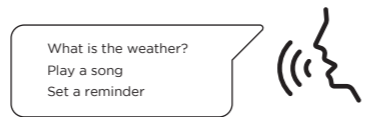

**Note:** If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.


## ENx™ Mode

Our ENx™ (Environmental Noise Cancellation) tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the 4x mics are already equipped with the same and activated by default.

*Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!*

## Package Contains:

- 1x Pair of TWS Earbuds
- 1x Charging Case
- 1x Type-C Charging Cable
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue
- 1x FAQ Card

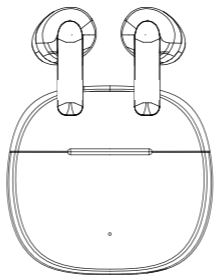

## Power On (First Time User)

**Step 1:** To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode

**OR**

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds


**Step 2:** After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes every 5 seconds on the secondary earbud

## Smart Power Off

**Step 1:** After usage, remove both the earbuds from your ears

**Step 2:** Place the earbuds back into the charging case in correct orientation and close the lid


The earbuds automatically switch off (and enter charging mode).

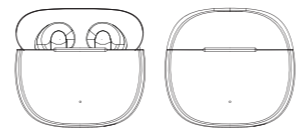

## Manual Power Off

**Step 1:** Long touch both CTCs for 5 seconds to manually power off the earbuds

**Step 2:** Once the earbuds get turned off, place them back inside the case and close the lid

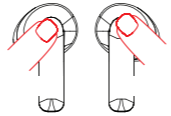

## Factory Reset

Perform the factory reset in case you feel any difficulty while operating your Airdopes.

\*NOTE: Before performing reset, clear "Airdopes 100" from pairing device history by forgetting device

**Step 1:** Open the cover lid of the case and place the earbuds inside the case

**Step 2:** Long press the Reset button on the case for 5 seconds; white LED on the case flashes for 5 times to indicate a successful reset

**Step 3:** Close the cover lid and reopen it again after 5 seconds to perform fresh connection

*Congratulations! Your Airdopes 100 has been Reset.*

## Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 100' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

**Note:**

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- Airdopes 100 remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.



## Single Earbud Usage


Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode indicated by red and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 100' to connect

**Notes:**

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

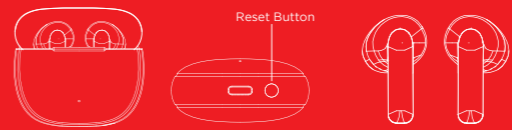


## Specifications

Headphone Type	TWS
Bluetooth Version	V5.3
Music Playtime	Up to 7HRS per charge; Up to 25HRS additional with Case (at 60% volume)
ASAP™ Charge	Yes
Transmission Range	10m
Standby	100HRS
Driver Size	10mm*2
Microphone	4
Bluetooth Profiles	HFP/HSP/AVRCP/A2DP
Frequency	20HZ-20KHZ
Battery	320mAh (Case) 40mAh*2 (Earbuds)
Charging Time	2HRS
Charging Interface	USB Type C
Water Resistance	IPX4

• You cannot skip tracks or return to the previous tracks in Mono (single-earbud) mode

## Quick Guide on Functionalities

 - 3 Seconds: Long touch either CTC for 3 seconds to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds: Long touch both CTCs for 5 seconds to manually power off
- 5 Seconds: Long press the case reset button for 5 seconds to perform factory reset



## Charging the Earbuds

**Step 1:** Please insert the earbuds back inside the charging case in correct orientation and close the lid

**Step 2:** During charging, the indicator on the earbuds turns into solid red

**Step 3:** Once the earbuds get fully charged, the charging case automatically switches off to save power, and the earbuds' indicator turns off

**Note:**

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

## Warning

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the earbuds' service life



boAt  
AIRDOPES 100