



boat

AIRDOPES 190

Get ready to immerse yourself in musical bliss with your very own pair of BOAT AIRDOPES 190. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.

PACKAGE CONTAINS:

- 1x Pair of TWS Earbuds
- 1x User Manual
- 1x Charging Case
- 1x Warranty Card
- 1x Type-C Charging Cable
- 1x Catalogue
- 1x FAQ Card

POWER ON (FIRST TIME USER)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IP67 (Ingress Protection) technology, the earbuds power on automatically, get connected and enter the connection mode.

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 sec to manually power on the earbuds.

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternating red and blue LED flashes on primary earbud.

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device & scan Step 4: Search for 'Airdopes 190' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth.

Note:

- ▶ Playing mode lasts for 3 minutes. If the playing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- ▶ Airdopes 190 remembers previously connected devices; once earbuds on, the earbuds automatically reconnect to the previously connected devices in working range.

SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for connecting on the desired earbud.

Step 2: The selected earbud automatically enters the connection mode, indicated by LED flashes.

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 190' to connect.

Note:

- ▶ To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence entering Stereo mode.
- ▶ No control able (back or/return to the previous track) in Mono (single-earbud) mode.

QUICK GUIDE ON FUNCTIONALITIES

- 3 Seconds: Long touch left CTC for 3 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 8 Seconds: Long touch both CTCs separately for 8 seconds to manually power off
- 8 Seconds: Long touch both CTCs for 8 seconds to manually power on
- 5 Seconds: Long touch both CTCs for 5 seconds to perform factory reset

CHARGING THE EARBUDS

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the lid.

(The LED will blink on the earbuds and case RGB LED will blink for 10 seconds, which indicates its in-charging state).

Step 2: Once the earbuds get fully charged, the earbuds LED will automatically power off.

Note:

- ▶ Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer / wall adapter / powerbank, etc. While the case is on charging, RGB LED will be in breathing mode. When the case gets fully charged, the charging area automatically switches off.

BASIC FUNCTIONS

- ▶ Voice Assistant: Long touch the left CTC for 3 seconds to activate default voice assistant.
- ▶ Answer / Single Tap CTC: Tap either earbud to answer an incoming call.
- ▶ Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject call.
- ▶ Play / Pause Music: Single tap either earbuds CTC to play or pause music.
- ▶ Next Track: When playing music, double tap the right earbud CTC to skip to the next song.
- ▶ Previous Track: When playing music, double tap the left earbud CTC to return to the previous song.

Note:

- ▶ Volume can only be controlled via the media device.

VOICE ASSISTANT

Step 1: Long touch the CTC on left earbud for 3 seconds to activate default smart voice assistant.

Step 2: The respective voice assistant screen pops up and you may place your commands at ease.

Tip: You may try out the following commands:

What is the weather?
Play a song
Set a reminder

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled on your mobile device settings.

ENX™ TECH

Our ENX™ (Environmental Noise Cancellation) tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENX™ as the six mics are already equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work spaces, virtually anywhere!

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears.

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid.

The earbuds automatically switch off (and enter charging mode).

MANUAL POWER OFF

Step 1: Long touch CTC for 3 seconds (Left & Right, separately) to manually power off each earbud.

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid.

FACTORY RESET

Perform the factory reset in case you face any difficulty while operating your Airdopes.

***NOTE:** Before performing reset, clear 'Airdopes 190' from pairing device history by forgetting device.

Step 1: Take out both the earbuds from the case.

Step 2: Long touch CTC on both the earbuds for 8 seconds.

Step 3: Place the earbuds inside the case, close the lid and wait for 5 seconds.

Step 3: Take out the earbuds from the case and perform a fresh connection.

Congratulations! Your Airdopes 190 has been Reset.

SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	LE V3
Music Playtime	Up to 10HRS per charge. Up to 30HRS additional with Case (at 50% volume).
Number of ENX™ Equipped Mics	6
IP67 Tech	Yes
BEAST™ Mode	Yes, 50ms low latency
Transmission Range	10m
Driver Size	2 x 10mm
Supported Cables	AUX, USB
Frequency	20HZ-20KHZ
Battery	400mAh (Case), 40mAh x 2 (Earbuds)
Charging Time	About 30min (Earbuds) and 1.5 hours (Case)
Charging Interface	USB Type C
Water Resistance	IPX4
Earbuds Weight	5.5g

WARNING

- ▶ Please follow the instructions to operate.
- ▶ Please don't use the earbuds in extreme temperatures.
- ▶ Please don't use the product near water.
- ▶ Please keep the product away from heat sources, as the heat may damage it.
- ▶ Don't jam the ports such as charger port, LED port, etc.
- ▶ It is recommended to use the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds may start at a 100% volume and it may need to be reduced when they are switched on at first. This can be done by using volume control on media device.



BEAST™ MODE

Long touch the right CTC for 3 seconds to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Long touch the right CTC for 3 seconds once again, to turn it off and return to standard Music Mode.

Note: For the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

VOICE ASSISTANT

Step 1: Long touch the CTC on left earbud for 3 seconds to activate default smart voice assistant.

Step 2: The respective voice assistant screen pops up and you may place your commands at ease.

Tip: You may try out the following commands:

What is the weather?
Play a song
Set a reminder

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled on your mobile device settings.

FACTORY RESET

Perform the factory reset in case you face any difficulty while operating your Airdopes.

***NOTE:** Before performing reset, clear 'Airdopes 190' from pairing device history by forgetting device.

Step 1: Take out both the earbuds from the case.

Step 2: Long touch CTC on both the earbuds for 8 seconds.

Step 3: Place the earbuds inside the case, close the lid and wait for 5 seconds.

Step 3: Take out the earbuds from the case and perform a fresh connection.

Congratulations! Your Airdopes 190 has been Reset.

SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	LE V3
Music Playtime	Up to 10HRS per charge. Up to 30HRS additional with Case (at 50% volume).
Number of ENX™ Equipped Mics	6
IP67 Tech	Yes
BEAST™ Mode	Yes, 50ms low latency
Transmission Range	10m
Driver Size	2 x 10mm
Supported Cables	AUX, USB
Frequency	20HZ-20KHZ
Battery	400mAh (Case), 40mAh x 2 (Earbuds)
Charging Time	About 30min (Earbuds) and 1.5 hours (Case)
Charging Interface	USB Type C
Water Resistance	IPX4
Earbuds Weight	5.5g

WARNING

- ▶ Please follow the instructions to operate.
- ▶ Please don't use the earbuds in extreme temperatures.
- ▶ Please don't use the product near water.
- ▶ Please keep the product away from heat sources, as the heat may damage it.
- ▶ Don't jam the ports such as charger port, LED port, etc.
- ▶ It is recommended to use the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds may start at a 100% volume and it may need to be reduced when they are switched on at first. This can be done by using volume control on media device.

