

boat



THE SOUND OF SLICK



Airdopes 101 True Wireless Ear-buds

Airdopes 101 True Wireless Ear-buds

Get ready to immerse yourself in musical bliss with your very own pair of boat Airdopes 101. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

Package Contents

- 1 x Airdopes 101
- 1 x Charging Case
- 1 x Type-C Charging Cable
- 2 x Pairs of Additional Eartips (Small & Large)
- 1 User Manual
- 1 Warranty Card
- 1 Garbage

Overview

- 1 CTC (Capacitive Touch Control) / Power Button



Power On:

Step 1: To switch the earbuds on Smart Power-On simply open the lid of the charging case (earbuds are ready for use). True Wireless Ear-bud Technology enables the earbuds to power on automatically, get connected and enter into the connection mode.

OR

Step 2: Both the earbuds for 3 seconds to manually power on the earbuds.

Step 3: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by red and blue LEDs flash.



Connection Mode:

Step 1: Turn on the Bluetooth functionality on your phone/table device and PC.

Step 2: Search for Airdopes 101 and pair accordingly.

Step 3: Search for Airdopes 101 and pair accordingly.


Note:

1. Pairing mode lasts for 3 minutes. If the pairing time is insufficient you will need to restart the earbuds from the above mentioned procedure.

2. Airdopes 101 remembers previously connected devices once established on the earbuds automatically connect to the previously connected device.



LED Indicators / Functionalities

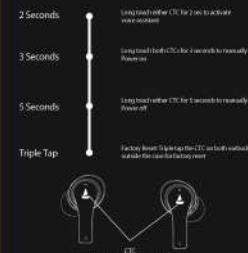

Single Earbud Usage

Step 1: Please note that both the earbuds can be used as mono mode. Use Smart Power-On for switching on the selected earbud.

Step 2: The selected earbud will automatically enter the connection mode indicated by red and blue LED flashes.

Note:

1. Switch on the mono mode, simply take out the other earbud from the case and it will automatically power on and pair with the previously selected earbud. Hence, no need to power on again.

2. You cannot pair both earbuds to your smartphone device and switch for switching on the earbud.



Charge the Earbuds:

Step 1: Please insert the earbuds back inside the charging case in correct orientation.

Step 2: Solid red LED indicates that the earbuds are being charged. Once fully charged the LED turns off.

Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.

Note:

1. Before using the ear buds for the first time, it is recommended to fully charge the ear buds. Also, please keep the lid of the charging case closed while charging.

Charge The Case:

Warning: Please do not charge the carry case with "9V" or "12V" output. Otherwise, it may cause damage to the case. Charge only according to the charging manual (not more than 2V 2A).

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer wall adapter, powerbank, etc.

Recharging Case Battery Indicator:

9-50% Red

50-100% Green



Basic Functions:

1. When Activated: Long hold the CTC on either earbud for 2 seconds to activate the voice assistant.

2. Answer/Music to Call: Single tap the CTC on either earbud to answer or hanging up and answer again to hang on an ongoing call.

3. Repeat Call: Long hold the CTC for up to 3 seconds to repeat incoming calls.

4. Play/Pause Music: Single tap on either earbud CTC to play/pause music.

5. Next Track: When playing music, double tap the right CTC to skip to the next song.

6. Previous Track: When playing music, double tap the left CTC to skip to the previous song.

Note:

1. Volume can only be controlled on the mobile device.



Voice Assistant:

Step 1: Long hold the CTC on either earbud for 2 seconds to activate the voice assistant.

Step 2: The respective voice assistant screen pops up and you may place your commands at ease.

Note: You may try the following commands.

- What is the weather?
- Play a song
- Set a reminder



Smart Power Off

Step 1: After usage, remove both the earbuds from your ears.

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid.

Step 3: The earbuds will automatically switch off and enter into charging mode.



Manual Power Off

Step 1: Long hold the CTC on either earbud for 5 seconds.

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid.

Factory Reset:

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 101.

Note: Before performing reset, clear "Airdopes 101" from pairing device history by forgetting device.

Step 1: Place both the earbuds back inside the charging case in correct orientation and close the lid.

Step 2: Take out both the earbuds from the case and hold tap on both CTCs outside the case for 10 seconds. Factory reset, which is indicated by the red LED.

Step 3: Swap the earbuds inside the case and shut the lid after a few seconds to open it again.

Step 4: Once you take the earbuds out from the charging case, the reset gets completed.

Step 5: Congratulations! Your Airdopes 101 has been reset.



Specifications

Bluetooth Version	V5.0
IPX Rating	IPX5
Music Playback	Up to 30 per charge
Playback Duration	Up to 120 min (closed with Case)
Standby Time	120h
Transmission Range	10m
Driver Size	13mm x 2
Bluetooth Profiles	A2DP, HFP, AVRCP, GATT, GAP
Frequency	2400-2480
Battery	60mAh (Case) 40mAh (2 Earbuds)
Charging Time	1h
Charging Interface	Type-C
Product Weight	7.44g

Charging norms & Precautionary Guidelines:	
1) Charger/Block/Adapter	5V 2A
2) Cable/Wire	Standard Cable (25 strands 0.5mm diameter) (stranded)

Any other accessories can be used all up with the product as long as their specifications are as per above norms.

Troubleshooting

Potential Problem	Solution
1. No sound in either earbud	1. Check the music source
2. Earbuds do not work in mono mode	1. Make sure the earbuds are in the correct orientation
3. Earbuds do not work in stereo mode	1. Make sure the earbuds are in the correct orientation

Warning:

- Please follow the instructions to operate.
- Please don't use the ear buds in extreme temperatures.
- Please don't use the product near water.
- Please keep the product away from heat sources, as this could cause damage.
- Don't use the ports such as chargeport, LED port, etc.
- It is recommended to take the product below the maximum volume in order to protect hearing, and avoid the ear buds from any harm.

Available: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are used for a long time. This can be done by using the phone's media keys.