



boat

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 413ANC.

Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

Package Contains:

- 1N Airdopes 413ANC
- 1N Warranty Card
- 2N Extra Earmuffs
- 1N Catalogue
- 1N Type C Cable
- 1N Read Me Card
- 1N User Manual
- 1N FAQ Card

USER MANUAL

Power On (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our **IWP™** (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR
Long touch the CTC (Capacitive Touch Control) on both earbuds for 2 seconds to manually power on the earbuds, indicated by blue LED flash for a second



Step 2: Both the earbuds automatically pair with each other and enter the Connection Mode

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 413ANC' and pair accordingly.

Congratulations! Your earbuds are successfully connected via Bluetooth and indicated by slow blue LED flashes on the master (right) earbud and solid blue LED on the left earbud.

Note:

• Pairing mode lasts for 5 minutes. If the pairing time gets missed, then you need to reconnect the ear-buds and follow the above mentioned procedure

• Airdopes 413ANC remembers previously connected devices; once switched on, the ear buds automatically reconnect to the previously connected devices

• When the right earbud is being kept inside the case and the left earbud is kept outside, the left earbud performs as the master earbud



Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud automatically enters the connection mode

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 413ANC' to connect



Note:

• To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

Quick Glance on Functionalities

- Triple Tap** ○ Triple tap the CTC on either earbud to activate voice assistant
- 2 Seconds** ○ Long touch both CTCs for 2 seconds to manually power on (blue LED flash)
- 10 Seconds** ○ Long touch both CTCs for 10 seconds to manually power off (blue LED flash)
- 6 Seconds** ○ Long touch both CTCs when earbuds inside the case to perform factory reset (red LED flashes thrice)



Charging the Earbuds

Step: Please insert the earbuds back inside the charging case in correct orientation.

Remaining Battery Indication

When earbuds get kept inside the case, during that brief period the case LED indicates the remaining battery for the earbuds

Battery Capacity	LED State
≤20%	Stays Red for 5 seconds
20%-80%	Stays Yellow for 5 seconds
>80%	Stays Green for 5 seconds

Note:

• Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging



Charging the Case

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

Case LED States (charging mode)

Battery Capacity	LED State
≤20%	Red
20%-80%	Yellow
80%-99%	Green
100%	LED turns off

Case LED States (non-charging mode)

When earbuds are outside the case and the case lid gets opened:

Battery Capacity	LED State
≤20%	Stays Red for 10 seconds
20%-80%	Stays Yellow for 10 seconds
80%-99%	Stays Green for 10 seconds

Basic Functions

- Active Noise Cancellation (ANC) Mode: In Ambient mode long touch either CTC for 2 seconds to activate ANC mode
- Ambient mode: In Normal mode, long touch either ctc for 2 seconds to active ambient mode for transparency towards your audible surroundings. Long touch on either CTC for 2 seconds in ANC mode, it will trigger to Normal mode. Ambient mode is default mode for 413 ANC
- Voice Assistant: Triple tap the CTC on either earbud to activate the default smart voice assistant
- Answer Call: Double tap the CTC on either earbud to answer incoming calls
- Hang Up Call: Double tap the CTC on either earbud to end ongoing calls
- Reject Call: Long touch the CTC on either earbud for 2 seconds to reject incoming calls
- Play/Pause Music: Double tap the CTC on either earbud
- Volume Up: Single tap the CTC on right earbud in steps to increase the volume
- Volume Down: Single tap the CTC on left earbud in steps to decrease the volume

Voice Assistant

Step 1: Triple tap the CTC on either earbud to activate the voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease



Tips: You may try out the following commands.

- What is the weather?
- Play a song
- Set a reminder



Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off (and enter charging mode)



Manual Power Off

Step 1: Long touch both CTCs for 10 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid



Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 413ANC

***NOTE:** Before performing reset, clear "Airdopes 413ANC" from pairing device history by forgetting device

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, long touch both CTCs for 6 seconds until charging case LED blinks thrice in red colour

Step 3: Close the lid and then re-open

Step 4: Perform a fresh connection attempt again and enjoy!

Congratulations! Your Airdopes 413ANC has been Reset



Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset

If there are other exceptions in usage

Place the earbuds back into the charging case and try using them again or perform the Factory Reset

If the Touch Controls don't seem to respond/phone call

After long usage, residual stains and perspiration can affect the touch control area. please use a clean cloth to wipe softly

Specifications

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.2
Water Resistance	IPX4
IWP Technology	Yes
ANC	Up to 25dB
ENx Tech (by default)	Yes
Music Playtime	Up to 6H per charge, Up to 14H additional with Case (without ANC) Up to 5H per charge, Up to 10H additional with Case (with ANC)
Standby	50H
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	10mm*2
Bluetooth Profiles	A2DP, AVRCP, HFP, HSP, SPP
Frequency	20Hz-20kHz
Battery	320mAh (Case) 37mAh*2 (Earbuds)
Charging Time	1.5H Earbuds; 2H Case
Charging Interface	Type C

Warning

- Please follow the instructions to operate
 - Please don't use the ear-buds in extreme temperatures
 - Please don't use the product near water
 - Please keep the product away from heat sources, as the heat may damage it
 - Don't jam the ports such as charger port, LED port, etc.
 - It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life
- Advisable:** The earbuds may start at a 100% volume and it may need to be reduced when they are switched on at first. This can be done by using the touch gesture volume controls on the earbuds

