

AIRDOPES 393ANC



Get ready to immerse yourself in musical delight with your very own pair of boAt Airdopes 393ANC. Please consider this manual as your guiding map towards the unparalleled shores of musical performance. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times whenever you face any sort of difficulty.

Package Contains:

- 1N Airdopes 393ANC
- 1N Charging Case
- 2N Extra Earmuffs
- 1N Warranty Card
- 1N Type C Cable
- 1N Catalogue
- 1N User Manual
- 1N Read Me Card
- 1N FAQ Card

USER MANUAL

Power On (First Time User)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our **IWP™** (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode.

OR

Long touch the CTC on both earbuds for 3 seconds to manually power on the earbuds.



Step 2: Both the earbuds automatically pair with each other. The earbuds enter into the Connection Mode.

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan.

Step 4: Search for 'Airdopes 393ANC' and pair accordingly.

Congratulations! Your earbuds are connected successfully via Bluetooth

Note:

• **Pairing Mode:** It lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure

• **Airdopes 393ANC remembers previously connected devices;** once switched on and within optimum range, the ear-buds automatically reconnect to the previously connected devices



Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 393ANC' to connect



Note:

• To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

• You cannot skip tracks or return to the previous tracks in Mono mode

Quick Guide - Functionalities

- 3 Seconds** Long touch left CTC for 3 sec to activate voice assistant
- 3 Seconds** Long touch both CTCs for 3 sec to manually power on
- 5 Seconds** Long touch both CTCs for 5 sec to manually power off
- 10 Seconds** Long press the Reset Button on case for 10 sec to perform factory reset



Factory Reset Button

*CTC (Capacitive Touch Control)

Charging the Case

To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

LED INDICATORS

Case	Normal State (Not in charging state)	Charging State Indication
Low battery	RED blinks (3 times) on opening the case lid/docking reset button	First shows the normal state and then goes into RED breathing (Slow Pulse)
30% - 70% battery	WHITE blinks (3 times) on opening the lid / clicking reset button	First shows the normal state and then WHITE breathing (Slow Pulse)
More than 70% battery	GREEN blinks (3 times) on opening the lid / clicking reset button	First shows the normal state and then Green breathing (Slow Pulse)
Case Fully Charged	LED stays off	Solid Green

Note:

o To Troubleshooting and Reset the earbuds, you can perform factory reset

o Case LED indication about inserting earbud into the case - This is to indicate TWS is charging from the case (When Lid is closed)

- Indicate with **CYAN** for LEFT bud for 5 seconds
- **PURPLE** for RIGHT bud for 5 seconds
- If both are properly charged **BLUE** for 5 seconds o Full Charge. When both are fully charged, it gets indicated by solid Green LED.

Charging the Earbuds

Step: Please insert the earbuds back inside the charging case in correct orientation. During charging, the LED on the earbuds stay solid red. Once fully charged, the LEDs turn off.

Note:

• Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging.

Basic Functions

• **Ambient Mode:** In Normal mode (Ambient OFF and ANC OFF) long touch the right CTC for 3 seconds to activate Ambient Mode for transparency towards the audible surroundings. Now you can stay mindful of your surroundings even while the playback is on the go. By default, the playback mode is set on Ambient Mode.

• **Active Noise Cancellation:** In Ambient Mode, long touch the right CTC again for 3 seconds to activate ANC mode. Now you can cancel out the external noise and let yourself fully immerse in your playlists.

• **Normal Mode:** Long touch the right CTC again for 3 seconds to switch back to Normal Mode.

Playback mode cycle: Ambient Mode (default) --- ANC Mode --- Normal Mode

• **Voice Assistant:** Long touch the CTC on left earbud for 3 seconds to activate the voice assistant.

• **Answer Call:** Single tap the CTC on either earbud to answer incoming calls

• **Hang Up / Reject Calls:** Double tap the CTC on either earbud to end / reject calls

• **Play/Pause Music:** Single tap the CTC on either earbud to play or pause music

• **Next Track:** When playing music, double tap the right CTC to skip to the next song

• **Previous Track:** When playing music, double tap the left CTC to start the song from the beginning or return to the previous song

• **BEAST™ Mode:** Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC again to turn it off.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming and entertainment experience.

• **ENx™ Tech:** Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

Note:

• Volume can only be controlled via the media device

Voice Assistant

Step 1: Long touch the CTC on left earbud for 3 seconds to activate the voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease



Tips: You may try out the following commands.

- What is the weather?
- Play a song
- Set a reminder



Note: If the voice assistant doesn't get triggered then the functionality has to be first enabled via your media device.

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off (and enter charging mode)



Manual Power Off

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid



Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 393ANC

***NOTE:** Before performing reset, clear "Airdopes 393ANC" from pairing device history by forgetting device.

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, long press the Reset Button for 10 seconds until led blinks 5 times on charging case as well as the earbuds (keep the lid open).

Step 3: Close the lid and then re-open it again after a few seconds.

Step 4: Perform a fresh connection attempt and enjoy!

Congratulations!

Your Airdopes 393ANC has been Reset, now you may perform a fresh pairing procedure to establish connection.

Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset

If the Touch Controls don't seem to respond

After long usage, residual stains and perspiration can affect the touch control area, please use a clean cloth to wipe softly

Specifications

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.2
Water Resistance	IPX5
IWP™ Technology	Yes
ANC	Hybrid ANC (Up to 32dB)
ENx™ Equipped Microphones	4
Music Playtime	Up to 7H (non ANC mode); Up to 6H (ANC); Up to 23H additional with Case (non ANC); up to 20H additional with Case (ANC), all at 60% vol
Standby	About 6 months
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	10mm*2
Bluetooth Profiles	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20KHz
Product Weight	8.4g (both earbuds); 36.1g (case)
Battery	400mAh (Case) 40mAh*2 (Earbuds)
Charging Time	About 2 hours
Charging Interface	Type C

Warning

- Please follow the instructions to operate
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device.

