



Airdopes 101

True Wireless Ear-buds

 
Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 101. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

Package Contents

- 1 1x boAt Airdopes 101
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 2x Pairs of Additional Earmuffs (Small & Large)
- 5 User Manual
- 6 Warranty Card
- 7 Catalogue

Overview

- 1 CTC (Capacitive Touch Control) / Power Button

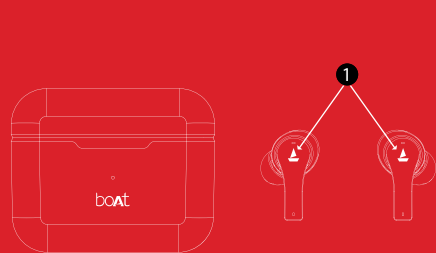


Power On:

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside), Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC on both earbuds for 3 seconds to manually power on the earbuds

 Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by red and blue LED flashes

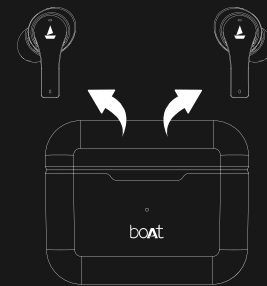

Connection Mode:

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 101' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

 
Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above mentioned procedure
- Airdopes 101 remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected devices



LED Indicators / Functionalities

- 2 Seconds: Long touch either CTC for 2 sec to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually Power on
- 5 Seconds: Long touch either CTC for 5 seconds to manually Power off
- Triple Tap: Factory Reset: Triple tap the CTC on both earbuds outside the case for factory reset

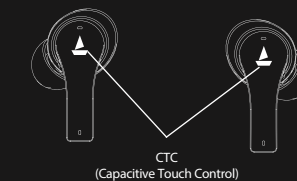

Single Earbud Usage

 
Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode indicated by red and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 101' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono mode

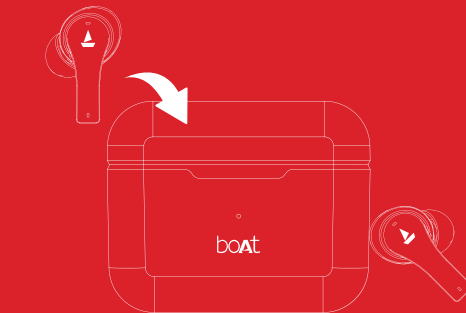

Charge the Earbuds:

 
- Step 1: Please insert the earbuds back inside the charging case in correct orientation.
 - Step 2: A solid red LED indicates that the earbuds are being charged. Once fully charged the LED turns off
 - Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.
- Note:
- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging

Charge The Case:

Warning: Please do not charge the carry case with "9V" or "12V" output. Otherwise, it may cause damage to the case. Charge only according to the charging norms (not more than 5V 2A).

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

Remaining Case Battery Indicator
0-50%: Red
50-100%: Green



Basic Functions:

- Voice Assistant: Long touch the CTC on either earbud for 2 seconds to activate the voice assistant
 - Answer/Hang Up Call: Single tap the CTC on either earbud to answer an incoming call and once again to hang up an ongoing call
 - Reject Call: Long touch the CTC for up to 1.5 seconds to reject incoming calls
 - Play/Pause Music: Single tap on either earbud's CTC to play or pause music
 - Next Track: When playing music, double tap the right CTC to skip to the next song
 - Previous Track: When playing music, double tap the left CTC to return to the previous song
- Note:
- Volume can only be controlled via the media device



Voice Assistant:

- Step 1: Long touch the CTC on either earbud for 2 seconds to activate the smart voice assistant
- Step 2: The respective voice assistant screen pops up and you may place your commands at ease

 
Tips: You may try the following commands,

- What is the weather?
- Play a song
- Set a reminder



Smart Power Off

- Step 1: After usage, remove both the earbuds from your ears
- Step 2: Place the earbuds back into the charging case in correct orientation and close the lid
- Step 3: The earbuds will automatically switch off (and enter into charging mode)

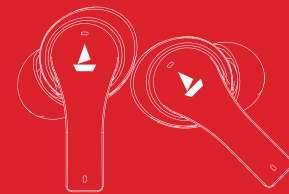

Manual Power Off

- Step 1: Long touch the CTC on either earbud for 5 seconds
- Step 2: Once the earbuds get turned off, place them back inside the case and close the lid.

Factory Reset:

- Perform the Factory Reset in case you face any difficulty while operating your Airdopes 101
- *NOTE: Before performing reset, clear "Airdopes 101" from pairing device history by forgetting device

 
Step 1: Place both the earbuds back inside the charging case in correct orientation and close the lid

Step 2: Take out both the earbuds from the case and triple tap on both CTCs (outside the case) to do Factory reset, which is indicated by the red LED

Step 3: Keep them back inside the case and shut the lid; after a few seconds re-open it again

Step 4: Once you take the earbuds out from the charging case, the Reset gets completed.

Step 5: Congratulations! Your Airdopes 101 has been reset

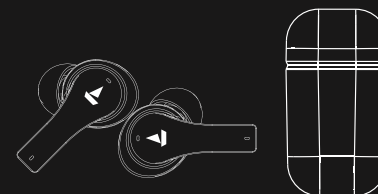

Specifications

Bluetooth Version	V5.0
IWP Technology	Yes
Music Playtime	Up to 3H per charge; Up to 12H additional with Case
Standby Time	100H
Transmission Range	10m
Driver Size	13mm*2
Bluetooth Profiles	HFP/ HSP/ A2DP/ AVRCP
Frequency	24Hz-24kHz
Battery	650mAh (Case) 40mAh*2 (Earbuds)
Charging Time	2H
Charging Interface	Type C
Product Weight	7.48g

Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If Touch Controls don't seem to respond	After long usage, residual stains & perspiration can affect the touch control area, please use a clean cloth to wipe those areas softly

Warning:

- Please follow the instructions to operate
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device