




MANUAL

Thank you for choosing boAt Rockerz 103 V2 Pro. Let this manual be your guiding map as you navigate the shores of musical bliss with these wireless neckband earphones. Knowledge of Bluetooth and device connection is essential for the usage of these neckband earphones. Therefore, we strongly recommend that this manual be read thoroughly before use and referred to in times of difficulty.

PACKAGE CONTENTS

- 1 x boAt Rockerz 103 V2 Pro
- 1 x USB Type C Charging Cable
- 2 x Pair Additional Earmuffs (Small & Large)
- 1 x Manual
- 1 x Warranty Card
- 1x Catalogue

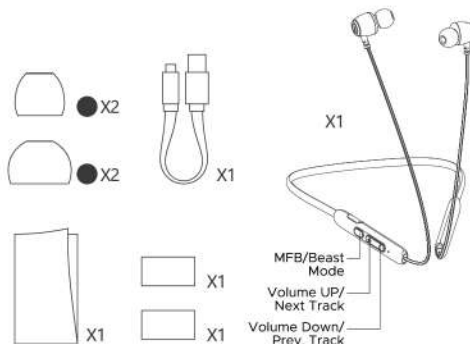

TO PAIR WITH BLUETOOTH

- When switched off, press and hold the MFB (Multifunctional Button) for 4 seconds to switch on the wireless earphones and put them into pairing mode. The earphones automatically enter pairing mode with a voice prompt, the white and red LEDs flash alternatively to indicate this.
- Open the Bluetooth functionality on your media device and search for "Rockerz 103 V2 Pro" from the list of available devices.
- Choose "Rockerz 103 V2 Pro" from the list and if asked for a passcode, enter the pairing code as "0000" to establish Bluetooth connectivity.
- Once successfully connected, the white LED flashes once every 5 seconds to indicate the same.

Note:

- The wireless neckband automatically turns off if pairing is not established within 5 minutes.

FUNCTIONS

- **Power On:** When switched off, press and hold the MFB for 3 seconds. This is followed by a voice prompt & the white LED flashes thrice to indicate the same.
- **Power Off:** In the switched-on state, press and hold the MFB for 5 seconds. A voice prompt confirms the powering off. The red LED flashes before the device gets turned off.
- **Play/Pause:** Short press the MFB to play/pause music at your convenience.
- **Volume Up:** Short press the Volume Up "+" button in steps to increase the volume. A voice prompt indicates maximum volume.
- **Volume Down:** Short press the Volume Down "-" button in steps to decrease the volume. A voice prompt indicates minimum volume.
- **Next Track:** To skip to the next track, press and hold the Volume Up "+" button for 2 seconds.

Front

- **Previous Track:** To go back to the previous track or start the track from the beginning, press and hold the Volume Down "-" button for 2 seconds.
 - **Answer/End Calls:** Short press the MFB once to answer an incoming call or end an ongoing call.
 - **Reject Call:** Press and hold the MFB for 2 seconds during an incoming call to reject the call.
 - **Redial:** To redial the previously contacted phone number, double press the MFB.
 - **Reset Device (Clear Paired List):** In pairing mode (when the white and red LEDs flash), press and hold the Volume Up and Volume Down buttons simultaneously for 5 seconds to clear the list of paired devices. The white LED stays on for 2 seconds to indicate the same.
 - **Dual Pairing:** To connect Rockerz 103 V2 Pro to two devices simultaneously, firstly connect the earphones to one of the devices. Then, switch off both the earphones and the device's Bluetooth. Thereafter, connect the earphones to the second device, and switch on the first device's Bluetooth again. The earphones are now connected to both the devices. If not, connect the first device manually once again to activate dual pairing.
 - **BEAST Mode:** Triple press the MFB to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple press the MFB to turn it off and return to normal mode.
- Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.
- **ENx™ Tech:** Our ENx™ tech algorithm cancels out the background noise so that you can hear crystal clear via voice calls. You don't have to activate ENx™ separately, as the mic is equipped with the same and activated by default.
- Deliver your voice without interruptions wherever you are – traffic, railway stations, airports, workspace; literally everywhere!
- **Voice Assistant:** Long press the MFB for 1.5 seconds to wake up the smart voice assistant.

CHARGING THE EARPHONES

Step: To charge the earphones, plug one end of the provided USB Type-C cable into the earphones and connect the other end to either a laptop or an adapter.

- Low Battery:** When the remaining battery is below 10%, there is a 'Battery Low' prompt every 1 minute and the red LED quickly flashes every few seconds to indicate the same.
- Charging:** Solid red LED indicates that the earphones are being charged (please note that the earphones cannot be turned on while charging).
- Fully charged:** Solid white LED indicates that the earphones are charged completely.

SPECIFICATIONS

| | |
|--------------------|--------------------|
| Bluetooth Version | v5.2 |
| Operating Range | 10 m |
| Frequency | 20 Hz-20 kHz |
| Driver Size | 10 mm*2 |
| Battery | 180 mAh |
| Talk Time | Up to 30 hours |
| Music Time | Up to 30 hours |
| Bluetooth Profiles | HFP/HSP/A2DP/AVRCP |
| Charging Time | About 1 hour |
| Charging Interface | USB Type-C |
| Driver Impedance | 16 Ω |
| BEAST™ Mode | Yes |
| Water Resistance | IPX5 |

SAFETY CAUTIONS

- Please don't dismantle the product or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.
- Please clean the earphones with the utmost care using only a soft damp cloth, if necessary. Please do not use any oily volatile liquid for cleaning. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the product's warranty null and void.
- Do not use the earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when connecting the earphones. Exposure to noise levels at or above 85 dB can gradually lead to a loss of hearing.

Charging norms & Precautionary Guidelines: -

| | |
|----------------------------|---|
| 1) Charger/Brick/Adapter : | 5V/2A |
| 2) Cable/Wire : | Standard Cable (35 strands @0.10mm diameter/strand) |

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.



Back

ROCKERZ
103 V2 Pro